

WOODSTOVE OPERATING INSTRUCTIONS

To ensure the safety of all visitors, the following instructions must be observed when using your woodstove.
The stove is designed to burn wood fuel only.

NO OTHER MATERIALS are permitted.

LIGHTING THE WOODSTOVE

- Open the draft damper located at the base of the stovepipe (where the pipe connects to the woodstove).
- Open the stove door and place crumpled paper and kindling fire starter into the firebox. **DO NOT USE FIRE STARTER FLUID**
- Light paper and kindling and then close the door securely.
- Add wood carefully after the fire is burning briskly using care not to smother it with too much wood.
- Adjust the draft damper and slide draft panel (located below and in front of the door) for optimum fire.
- **DO NOT OVERFILL** the stove with wood.

ADDING WOOD TO THE STOVE

- Always open the draft damper before opening the stove door.
- Add **SMALL AMOUNTS** of wood carefully.
- **ALWAYS** close the door and secure tightly.

IMPORTANT

- **NEVER** pour water inside the stove to extinguish a fire. This risks cracking the cast iron. Simply close the draft damper to cut off oxygen and the fire will exhaust itself out. The Tent Village staff will dispose of any ashes after you depart.
- **DO NOT** pull out the damper rod. Simply rotate the damper rod, as illustrated in step 1 below, to control the airflow of the potbelly stove.

If you have any questions or concerns, please request assistance from a Tent Village Employee.

STEP BY STEP GUIDE TO BUILDING THE PERFECT FIRE



1. Open the draft damper.
Horizontal = Closed
Vertical = Open



2. Add a ball of newspaper.



3. Add kindling. Three to five pieces is sufficient.



4. Light the newspaper. Fire in the Hole!



5. Congratulations! You have successfully built a fire!



6. Continue to burn logs. Open the slide draft control to provide maximum heat.


COLTER BAY



VILLAGE

Key:

- Recycling Location
- Handicapped Restroom
- Pay Phone

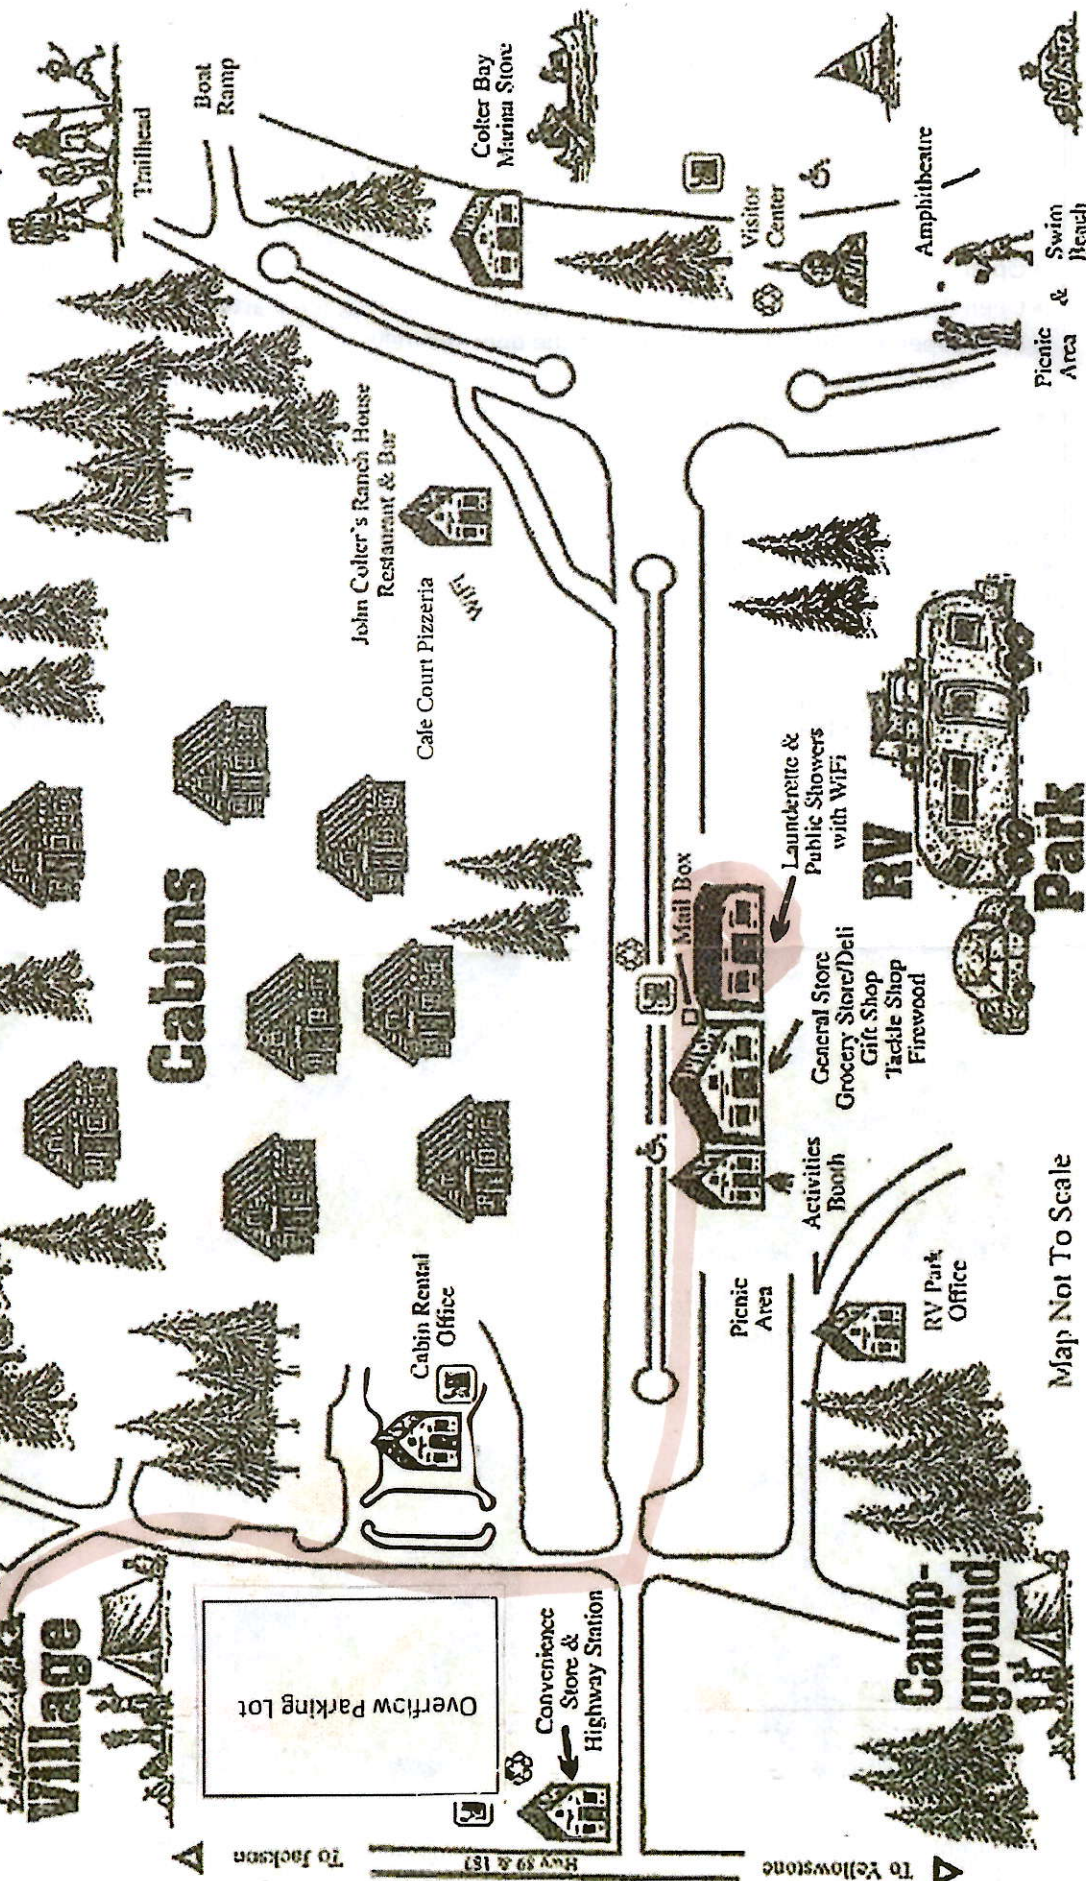

Map Not To Scale